


Red Deer Ironworks




MANDC0425-A001 Operation Manual

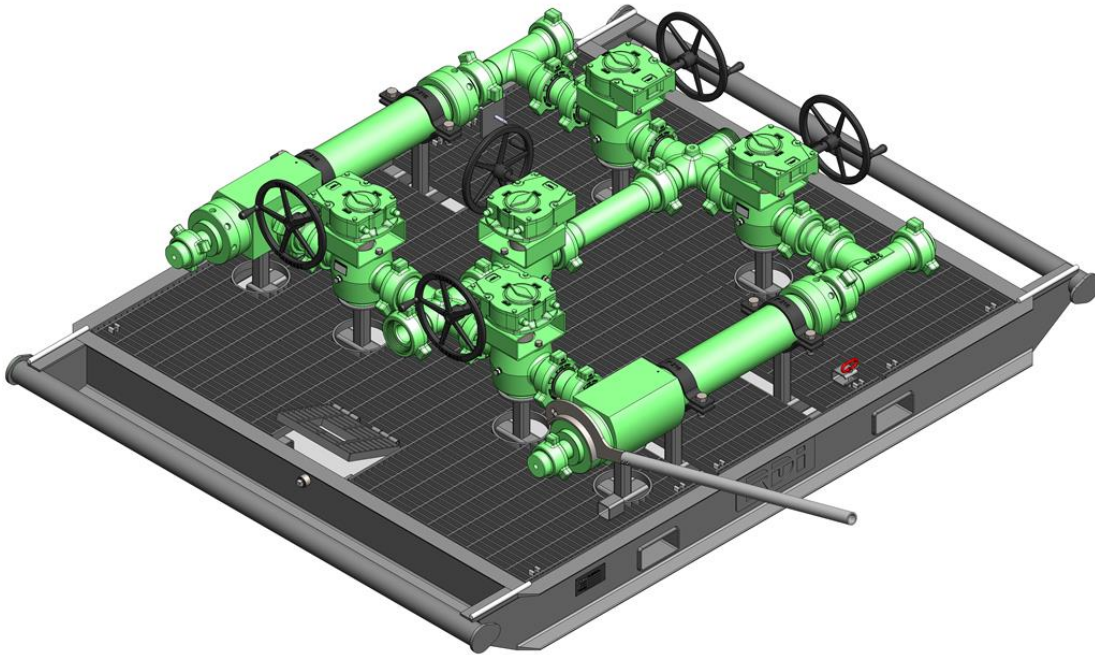

Other Similar Manifolds that this procedure can be used for: **MANDC0421, 0422, 0426, 0427, 0428, 0447, 0448.**

The dual barrel debris catcher is designed to catch debris flowing back from the well. The dual design allows the operator to switch flow to the opposite catcher when the barrel becomes full and clean out the catcher while flowing through the opposite side.

When operating the plug valves always close the downstream valve first followed by the upstream valve, when opening always open the valves in the opposite order i.e. open the upstream valve first and then open the downstream valve. This will save the upstream valve from wear, as it will be opened and closed when there is no flow.

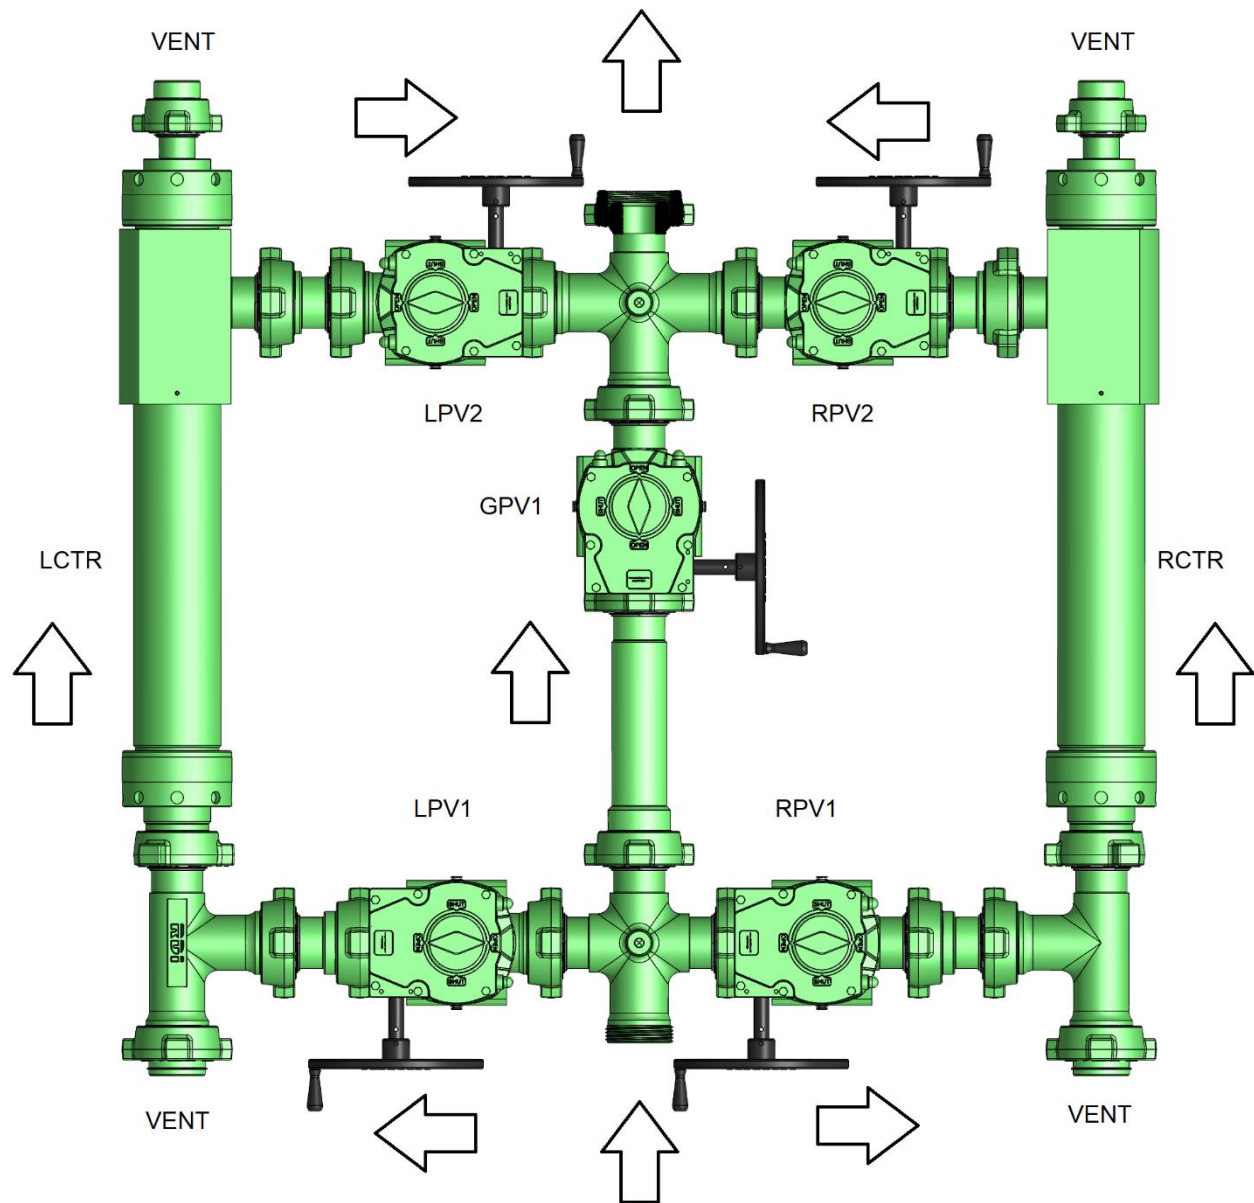

Procedure to operate catcher for one full cycle

1. Before opening flow to the catcher do the following steps:
 - 1.1. Close RPV2 & RPV1.
 - 1.2. Open LPV1, LPV2.
 - 1.3. Ensure gutline plug valve is in the closed position (GPV1).
 - 1.4. Ensure blowdown valves (if present) or vent fittings on both sides are in the closed position.
 - 1.5. Initiate flow through catcher, fluid will now be flowing through the left catcher (LCTR).
 - 1.6. When it is time to clean out left catcher screen do the following steps.
 - 1.7. Open RPV1.
 - 1.8. Then open RPV2.
 - 1.9. Close LPV2.
 - 1.10. Then close LPV1.
 - 1.11. Flow is now through the right catcher and the left catcher is isolated.
 - 1.12. See DWG MANDC0425-A001 Sheet 2 (or applicable drawing) for cleaning instructions, ensure pressure is bled above and below catcher barrel.
 - 1.13. When it is time to clean out right catcher screen do the following steps.
 - 1.14. Open LPV1.
 - 1.15. Then open LPV2.
 - 1.16. Close RPV2.
 - 1.17. Then close RPV1.
 - 1.18. Flow is now through the left catcher and the right catcher is isolated.
 - 1.19. See DWG MANDC0425-A001 Sheet 2 (or applicable drawing) for cleaning instructions, ensure pressure is bled above and below catcher barrel.
 - 1.20. Repeat steps starting at 1.7.
2. Procedure to start flow through gutline:
 - 2.1. Open GPV1.
 - 2.2. Close LPV2 & RPV2 (if open)
 - 2.3. Then close LPV1 & RPV1 (if open).
3. Procedure to shutdown flow through gutline:
 - 3.1. If you do not want to flow through catcher skip to step 3.4.
 - 3.2. Open LPV1 (replace L with R for right side).
 - 3.3. Then open LPV2 (replace L with R for right side).
 - 3.4. Close GPV1.
4. Procedure to blowdown catcher:
 - 4.1. Open Left (or right) blowdown valve.
 - 4.2. If required Close LPV2 (replace L with R for right side).
 - 4.3. Once blowdown operation is complete continue to next step.
 - 4.4. Open LPV2 (replace L with R for right side).
 - 4.5. Close Left (or right) blowdown valve.

RDI Sales & Service Centers

For a list of our locations visit our website @
<https://rdironworks.com/contact-a-location-near-you/>.



Toll Free Phone: 855.973.4733

Toll Free Fax: 855.573.4473

Email: info@rdironworks.com



Valves • Flowline • Manifolds
Recertification

RDIRONWORKS.COM